


Certifications

### Instructions

116763 – Chrome less spray 116762 – Chrome with spray 10-K82-WNCH1-B-Z – Chrome less spray 10-K82-WYCH1-B-Z – Chrome with spray

### **Two Handle Kitchen Faucet**

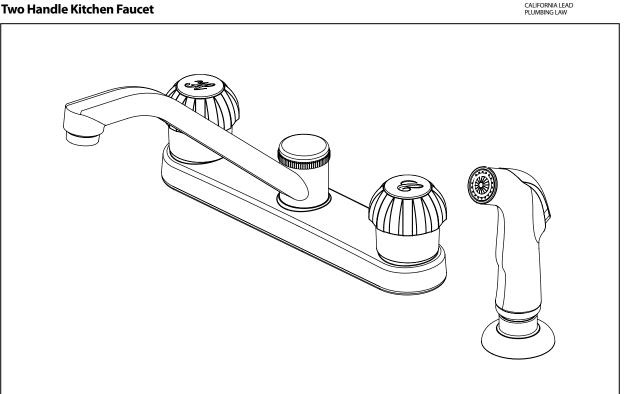

\*Image may vary slightly from actual product

### **Tools Required**

Adjustable Wrench **Groove Joint Pliers Pipe Wrench Phillips Screwdriver** Pipe Tape or pipe thread compound

### **Safety Tips**

If you solder the joints during installation of the faucet, the seats, cartridges, and washers must be removed before using a flame or the warranty will be voided on these parts.

Protect your eyes with safety glasses when cutting or soldering water supply lines.

Cover the sink drain to avoid losing parts.

### **Things You May Need**

Installations may vary depending on how the previous faucet was installed. Supplies necessary for the installation of your faucet are not all included; however, they are available wherever plumbing supplies are sold.

### Maintenance

Your new kitchen faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

#### Important Points

Prior to beginning installation, turn off the hot and cold water lines, then turn on the old faucet to release built-up pressure. When installing your new faucet, turn the connector nuts finger tight, then use one wrench to hold the fitting and a second wrench to tighten the nut. Connections that are too tight will reduce the integrity of the system.

Wrap all threaded connections with PTFE pipe tape available at your local hardware or plumbing supply store. Always wrap in a clock-wise direction.


#### **Contact Us**

For Customer Service please call 877-319-3757, or go to homewerksww.com.





### Effective/Rev Date: July 31, 2011

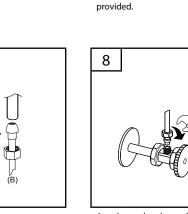


Attach supply tube to shut off valve. Do not overtighten

R Important: After installation is completed,

remover aerator. Turn on water supply and allow both hot and cold water to run for at least one minute each. While water is running, check for leaks. Replace aerator. Tighten nuts slightly to stop minor leaks. If problems persist, refer to troubleshooting

**Two Handle Kitchen Faucet** 

116763 – Chrome less spray 116762 - Chrome with spray

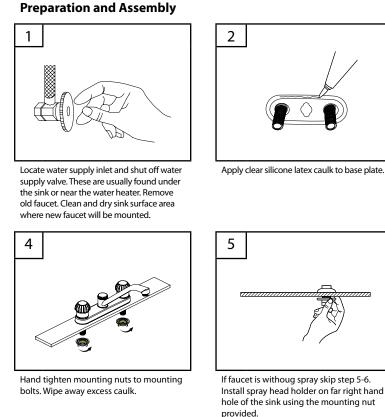




Instructions


10-K82-WNCH1-B-Z – Chrome less spray


10-K82-WYCH1-B-Z – Chrome with spray

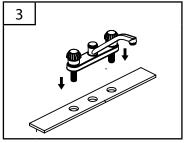

Position faucet on sink surface.

 6



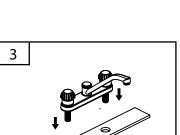

UPC


CALIFORNIA LEAD PLUMBING LAW




Certifications



chart.

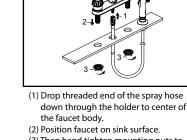

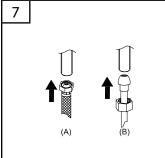

Connect water supply lines. (A) Use 1/2" IPS faucet supply lines or (B) use coupling nuts (not supplied) with ball-nose risers (not included). Turn water supply or shut-off valve back on and check for leaks. If leaks occur, gently tighten the faucet connections.



# Troubleshooting

116763 – Chrome less sprav 116762 – Chrome with spray

### 10-K82-WNCH1-B-Z – Chrome less spray 10-K82-WYCH1-B-Z – Chrome with spray



### Certifications

UPG CALIFORNIA LEAD PLUMBING LAW

### **Two Handle Kitchen Faucet**

### Troubleshooting

PROBLEM: Leaks underneath handle. CAUSE: Bonnet has come loose or O-ring on cartridge is dirty or twisted. ACTION:

- 1. Move the handle to the off position. Remove index button and
- unscrew the handle screw and remove the handle (Diagram A). 2. Tighten the bonnet by turning it clockwise (Diagram B). Move the cartridge stem to the on position. The leak should stop draining out from around the cartridge stem.
- 3. If the leak does not stop, shut off the water supply. Remove the bonnet by turning it counter-clockwise. Lift out the cartridge valve (Diagram C). Inspect the larger O-ring on the cartridge bonnet and the smaller O-ring on the cartridge stem. Remove any debris from the O-rings. If either O-ring is twisted, straighten it. If either O-ring is damaged, replace the cartridge by calling Customer Service.
  4. Position the cartridge back into the faucet body (Diagram D). Make sure
- the ridges on the two sides of the cartridge bonnet fit into the grooves on the two sides of the faucet body. Tightly screw the bonnet onto the faucet body.
- 5. Re-install the handle.

PROBLEM: Water does not completely shut off.

CAUSE: Rubber valve seat is dirty, stuck, or broken.

ACTION:

- 1. Shut off the cold water supply. If leak stops, the problem is on the cold side. If leak continues, the problem is on the hot side. Shut off the hot water supply to determine if both the cold and hot side have a problem.
- 2. Remove the handle on the problem side. Loosen the bonnet by turning it counter-clockwise (Diagram E). Lift out the cartridge assembly.


- 3. Inspect the rubber valve seat in the faucet body. If there is debris or brass scrap on the surface of the seat, remove it. If the rubber seat is stuck tightly in the water inlet hole, push it gently with a fingertip so that it tighty in the water met note, push it gently with a inigerup so that it moves up and down smoothly. The spring (smaller end up) must be replaced underneath the valve seat. If the rubber valve seat is worn out or broken, replace the cartridge by calling Customer Service.
   4. Replace the cartridge in the faucet body. Make sure that the ridges on
- the two sides of the cartridge bonnet fit into the grooves on the two sides of the faucet body (Diagram F). Tightly screw the bonnet onto
- the faucet body. 5. Re-install the handle.
- PROBLEM: Faucet leaks around aerator.
- CAUSE: Aerator incorrectly fitted.
- ACTION:
- 1. Unscrew the aerator by turning it clockwise (Diagram G). Inspect the black rubber packing inside the aerator. The rubber packing should be flat.
- 2. Screw the aerator onto the spout end and tighten.
- PROBLEM: Improper water pattern.

 
CAUSE: Aerator dirty or small parts inside aerator improperly installed. ACTION:

 
- Remove the aerator from the spout end by turning it clockwise.
   Gently flush the small parts inside the aerator to clear away any debris.


D

 
- Re-install the small parts as shown in the exploded diagram (Diagram H). Metal screens must be flat and plastic supporter must be straight.
   Screw the aerator onto the spout end and tighten.

 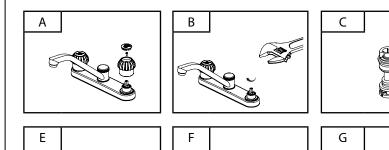






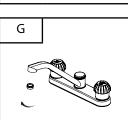





# **Specifications**

01

H

### **Physical Characteristics**

- Description: 2 Acrylic handle kitchen faucet with 8" center set, 1/4-turn washerless cartridges, metal housing, and side spray
- Max. Flow Rate: 2.2 GPM (8.3 LPM)
- ASME A112.18.1/CSA B125 Certified
- Meets ANSI/NSF 61-9 Low Lead Requirements
- This product complies with 0.25% weighted average lead content on wetted surfaces.
- Total Weight of Item: 1247.99g




### Certifications



116763 – Chrome less spray 116762 – Chrome with spray 10-K82-WNCH1-B-Z – Chrome less spray 10-K82-WYCH1-B-Z – Chrome with spray

No.	Part Description	Material
1	Hot index	PMMA V040
2	Cold index	PMMA V040
3	Screw	SUS302
4	Handle	PMMA V040
5	Bonnet	ZZnA14
6	Washer	POM Celcon M90
7	Cartridge	NBR N7008F+SUS304+PO
8	Seat	NBR
9	Spring	SUS304
10	Escutcheon	ZZnA14
11	Body	3101+Brass C37700+NBR
12	Base plate	PP+20% CaCO <sub>3</sub>
13	Mounting nut	ABS PA727
14	Сар	ABS PA727
15	Washer	EPDM E7008F
16	O-ring	NBR N7008F
17	Spout	C37700+C27000
18	Aerator assembly	EPDM E7008F
19		POM DeLrin500PBK602+S
20		ABS PA727
21	Diverter	C37700+POM M90+EPDM
22	Side spray	POM+PVC
23	Washer	POM Celcon M90
24	Washer	POM Celcon M90
25	Washer	POM Celcon M90
26	Wrench	Q235

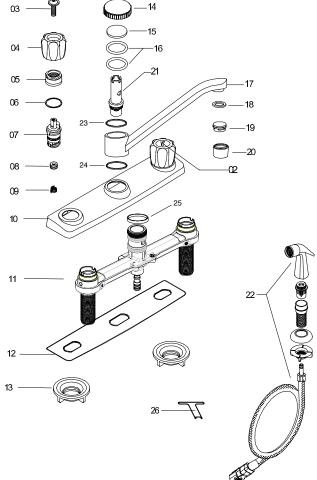

4




## **Rough-In**

116763 – Chrome less spray 116762 – Chrome with spray 10-K82-WNCH1-B-Z – Chrome less spray 10-K82-WYCH1-B-Z – Chrome with spray



С

UPG

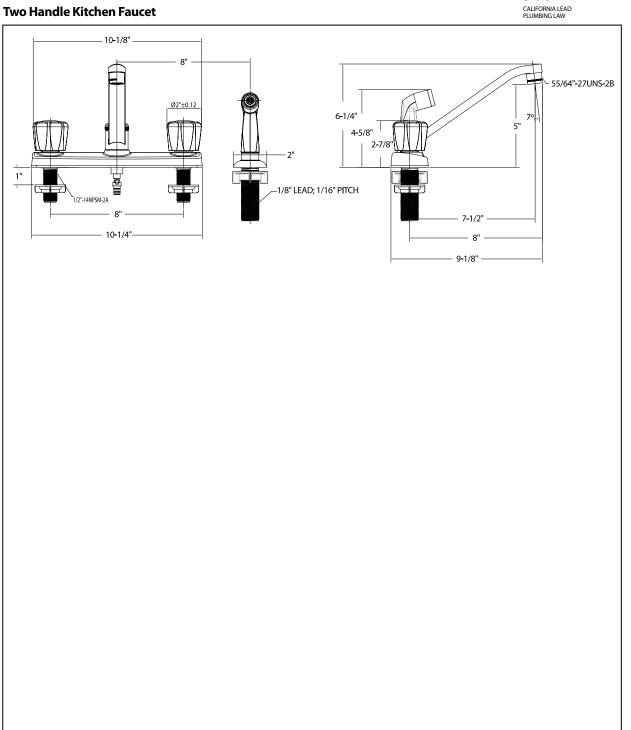



5